



SÖLT

# 90cm Dual Fuel Freestanding Cooker Quick Start Guide

Tips for Using & Operating Your Freestanding Cooker  
Model: GGSUC908S



# 90cm Dual Fuel Freestanding Cooker Getting Started...

## Oven Modes Explained



**Light:** This turns on the two oven cavity lamps.



**Bake (Conventional):** Heat from both the upper and lower elements is used to prepare your food.



**Fan Forced:** This uses the central rear heating element and fan to distribute heat evenly.



**Fan Bake:** This uses the upper and lower elements and fan to distribute heat evenly for multiple dishes at once.



**Fan Grill:** Fan combined with the upper element and grill element.



**Grill:** Upper grill heating element.



**Full Grill:** Powerful upper grilling using both grill elements.




**Lower Element:** Heat from only the lower element, perfect for a range of pastry dishes.



**Defrost:** The oven fan circulates the air at room temperature, enabling you to quickly defrost food.

## The Control Panel

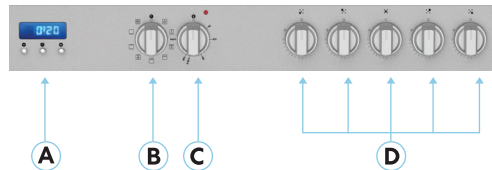

### A Clock/Timer

Use these controls to set a timer, cooking duration, or adjust the clock.

### B Mode Selector

Use this knob control to select the type of oven cooking mode.

### C Temperature Controls

Use this control to select a temperature between 60°C and Max.

### D Cooktop Zone Controls

Use these knobs to control the corresponding indicative burner areas.

## Installation

For a complete installation guide, refer to the Installation Instructions in the user manual pages 23–31.

## Dimensions

Size (mm): 895W × 595D × 858-918H