



SÔLT

Vented Dryer 7.0kg Capacity Quick Start Guide

Tips for Using & Operating Your Vented Dryer
Model: GGSVD7



Vented Dryer


7.0kg Capacity

Getting Started...

Using Your Vented Dryer

After loading the laundry into the drum, shut the machine door and press the **Power** button. Choose your desired drying cycle by press the **Program** button and select any additional options using the **Dryness** or **Anti-Crease** button. Press the **Start/Pause** button to begin your cycle. At the end of the cycle, the dryer will make an audible tone and begin a cooling cycle. Once the cooling cycle is complete, the dryer will make another audible tone. Remove your clothes from the dryer and turn it off by pressing the **Power** button. It is recommended when you are done with the machine to also turn it off from the power outlet, and clean the filter and inner drum.

Operating Your Vented Dryer

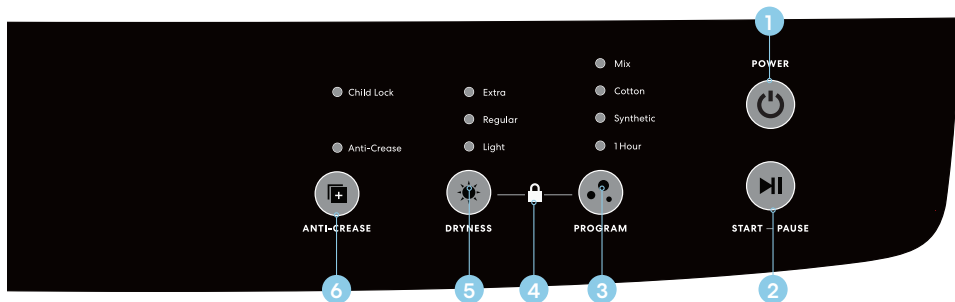

- 1) Power:** Select this button switch the dryer on.
- 2) Start/Pause:** After selecting your desired settings, press this button to start your drying cycle.
- 3) Program:** Select your drying program.
1 Hour, Synthetic, Cotton or Mixed Items
- 4) Child Lock:** Simultaneously press the Program and Dryness buttons for 3 seconds to activate/deactivate the child lock.
- 5) Dryness Level Selector:** Select this button to choose your desired level of dryness for your load.
- 6) Anti-Crease:** Select this optional setting to minimise creases that can be formed when laundry is not unloaded promptly at the end of a drying cycle